

ISTRUZIONI DI MONTAGGIO PIASTRA GIREVOLE PER SEDILE IVECO

1° Fase :SMONTARE IL SEDILE

2° FASE :RUOTARE LA PIASTRA DI CIRCA 30° PER LIBERARE IL PASSAGGIO DELLE VITI

3° FASE :FISSARE IL SEDILE SULLA PARTE SUPERIORE DELLA PIASTRA GIREVOLE UTILIZZANDO:

"C" - Nr° 2 VITI T.C.E.I. M8x20 IN DOTAZIONE (SOLO PER ANCORAGGIO POSTERIORE)

"D" - Nr° 4 VITI T.C.E.I. M8x16 IN DOTAZIONE


"B" - Nr° 6 RONDELLE M8x16 IN DOTAZIONE

"F" - Nr° 6 DADI AUTOBLOCCANTI M8 IN DOTAZIONE

4° FASE :FISSARE LA PARTE INFERIORE DELLA PIASTRA GIREVOLE AL CESTELLO

"A" - Nr° 6 VITI ORIGINALI

"B" - Nr°6 RONDELLE M8x16 IN DOTAZIONE

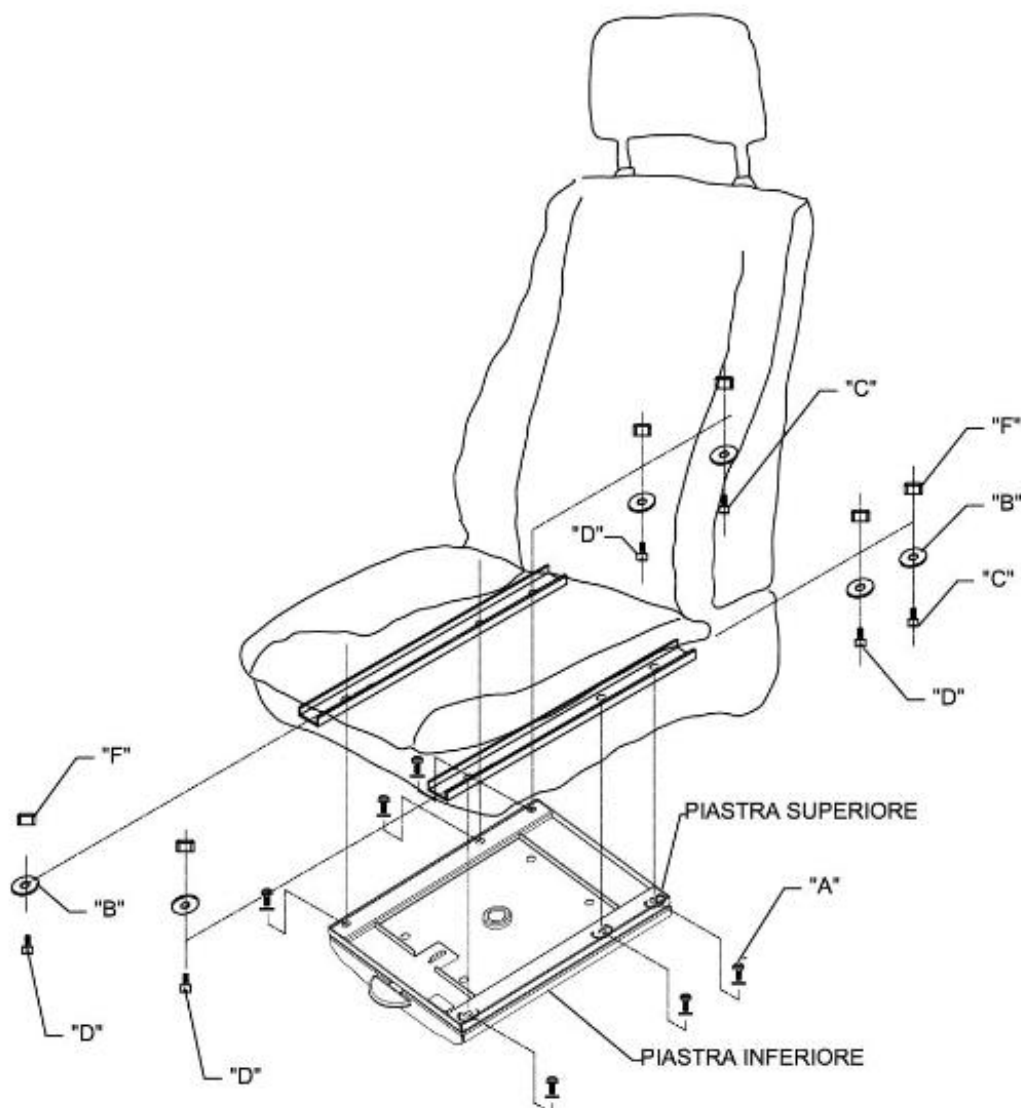



CTA s.r.l. Via Groenlandia, 23 • 00071 Pomezia (RM) Italy +39 06.91601096
info@ctapomezia.it www.ctapomezia.it
Part. IVA: 04002911008 - Reg. Imp. N. 1714/91 - R.E.A. N. 721236

P/N: 9PG0116200V01

ASSEMBLY INSTRUCTIONS FOR SWIVEL PLATE'S IVECO SEAT

1° PHASE : DISASSEMBLE THE SEAT

2° PHASE : TURN THE SEAT ABOUT 30° TO LET FREE THE PASSAGE FROM THE SCREWS I

3° PHASE : FIX THE SEAT ON THE SWIVEL PLATE USING:

"C" - Nr° 2 SCREWS T.C.E.I. M8x20 SUPPLIED (ONLY FOR REAR ANCHORAGE)

"D" - Nr° 4 SCREWS T.C.E.I. M8x16 SUPPLIED

"B" - Nr° 6 WASHERS M8x16 SUPPLIED

"F" - Nr° 6 SELF-LOCKING NUTS M8 SUPPLIED

4° PHASE : FIX THE LOWER PART OF THE SWIVEL PLATE AT THE BASKET, WITH:

"A" - Nr 6 ORIGINAL SCREWS

"B" - Nr°6 WASHERS M8x16 SUPPLIED

